


PAGE 1

Final Result

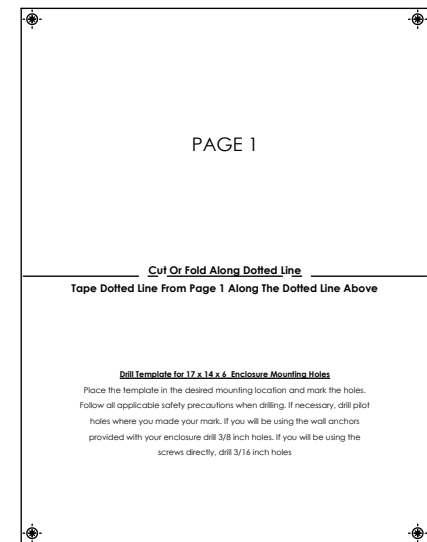

Cut Or Fold Along Dotted Line

Tape Dotted Line From Page 1 Along The Dotted Line Above

Drill Template for 17 x 14 x 6 Enclosure Mounting Holes

Place the template in the desired mounting location and mark the holes. Follow all applicable safety precautions when drilling. If necessary, drill pilot holes where you made your mark. If you will be using the wall anchors provided with your enclosure drill 3/8 inch holes. If you will be using the screws directly, drill 3/16 inch holes

