


XLR Connector

T1X31M-BAXS-BK (male)


T1X31F-BAXS-BK (female)

Field assembly instructions for installers


Please read instructions carefully prior to assembly. Scan QR code below for more product information.

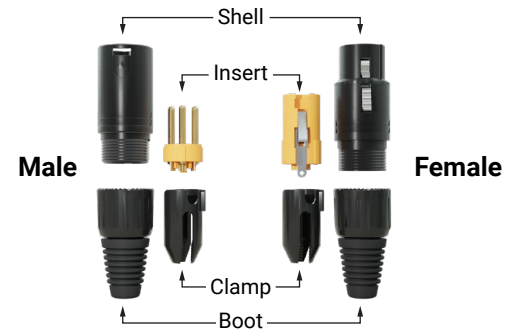

Pin Definitions

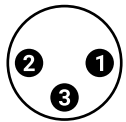


Male

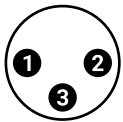


Female

- 1 Ground
- 2 Positive
- 3 Negative


1. Slide boot and clamp onto cable

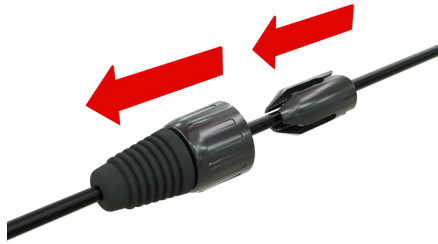

2. Prepare cable as shown

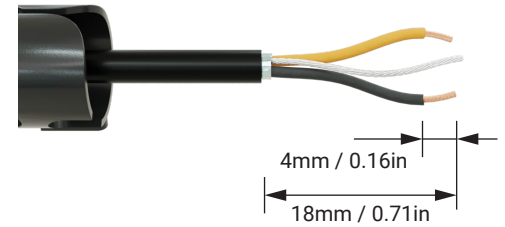

3. Solder wires into insert

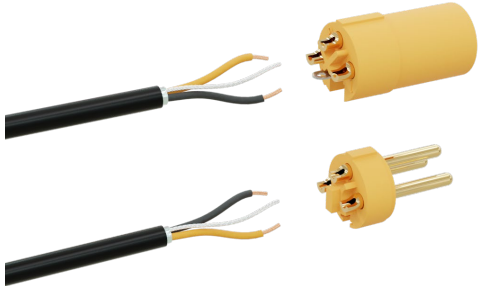

4. Slide the clamp against the insert



5. Push shell onto insert and clamp



6. Screw boot onto shell

