




Using Shortcuts Guide

(Version 1.0)

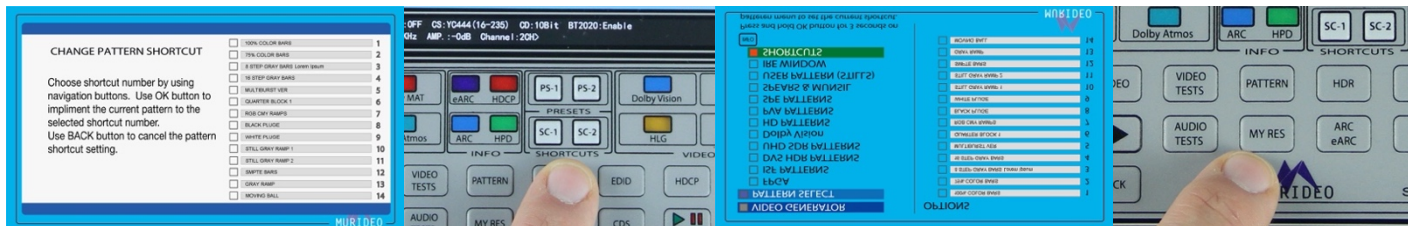

Welcome to the "Using Shortcuts Guide" for the Murideo SEVEN Generator. Now that you have your own SEVEN Generator, setting it up to work how YOU want is one of the first steps. To help you do that the SEVEN Generator has a verity of customizable shortcuts. We will cover exactly how to set up and use these tools that are prebuilt into the SEVEN Generator.

There are four separate options for shortcuts:

- Keypad Shortcuts
- Test Pattern Shortcuts
- My Resolutions Shortcuts
- Pre-sets on the Keypad

Each shortcut has a different function and method of use, after you set up your shortcuts, they can always be changed later. Setting up and switching shortcuts is so easy on the SEVEN Generator that many will change their shortcuts day to day as needed.


“Presets” on the Keypad

Presets buttons will quickly set your SEVEN Generator to a specified signal that you have previously setup. This allows you to recall a certain resolution, timing, color space, audio signal and test pattern configuration.



How to set up and use your preset button:

1. Navigate through the menu and select a resolution, timing, color space, audio signal and test pattern configuration signal of your choice.
2. Once you have the signal you want press and hold either “PS-1” or “PS-2”, after about 4 seconds you will see all signal lights flash on and off. This lets you know you have successfully set up you Preset Button.
3. Press the “PS-1” or “PS-2” to access this preset, no matter what other signal you were working with, pressing these buttons will automatically switch the signal to your preset choices.

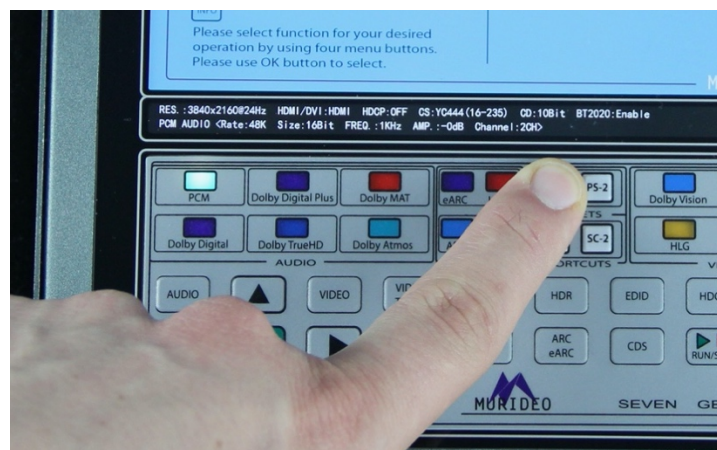

“Shortcuts” on the Keypad

Shortcut buttons will quickly set your SEVEN Generator to jump to a previously specified menu screen. These buttons are located This allows you to skip the navigation menu for screens that you might use a majority of the time. Set up your tool the way you want it to work.



How to set up and use your shortcut button:

1. Navigate through the menu to a screen you want to set to a shortcut button.
2. Once you have the signal you want press and hold either “SC-1” or “SC-2”, after about 4 seconds you will see all signal lights flash on and off. This lets you know you have successfully set up your Shortcut Button.
3. Press the “SC-1” or “SC-2” buttons to access this menu screen at any time, it doesn’t matter where you are in the menu system, pressing these buttons will automatically jump you to the pre-selected menu system.



My Patterns – Test Pattern Shortcuts

The SEVEN-G has a unique feature that allows the user to quickly access their 14 most commonly used test patterns. This saves a ton of time from searching for test pattern you will be using all the time. To start we need to populate our shortcut menu by selecting the patterns we want to use.

How to add a pattern to the “My Patterns” index.

1. Navigate through the menu to a test pattern in the menu structure that you want to add to the “My Patterns” index.
2. Once highlighted, press and hold the “OK” button for 4 seconds



3. Follow the on-screen instructions to store the pattern shortcut to a specified shortcut number



4. You are done, and your test pattern is now available via the Shortcuts menu screen

How to access “My Patterns” and use a pattern.

1. There is a quick navigation button located directly on the keypad labeled “Patterns” press it and the list will appear.



2. Use the directional buttons to navigate to the resolution & timing you want and press OK, your signal is now live!



My Resolutions – Resolution & Timing Shortcut

Similar to My Patterns is My Resolutions, this unique feature allows the user to quickly access their 14 most commonly used resolution & timing combo. To start we need to populate our shortcut menu by selecting the resolution & timing we want to use.

How to add a pattern to the “My Resolutions” index.

1. Navigate through the menu to a resolution & timing that you want to add to the “My Resolutions” index.
2. Once highlighted, press and hold the “OK” button for 4 seconds



3. Follow the on-screen instructions to store the resolution & timing to a specified shortcut number
4. Now your resolution has been stored to the shortcut resolutions.



How to access “My Resolutions” and use a resolutions & timing.

3. There is a quick navigation button located directly on the keypad labeled “My Res” press it and the list will appear.
4. Use the directional buttons to navigate to the resolution & timing you want and press OK, your signal is now live!



If you have any questions please reach us at the information at the bottom of every page, Thanks for choosing Murideo.

