



# User Manual

## TL-TP70-HDARC

**70m Extender with ARC and IR**



**All Rights Reserved**

Version: TL-TP70-HDARC\_190927

## Preface

Read this user manual carefully before using this product. Pictures shown in this manual is for reference only, different model and specifications are subject to real product.

This manual is only for operation instruction only, not for any maintenance usage.

## Trademarks

Product model and logo are trademarks. Any other trademarks mentioned in this manual are acknowledged as the properties of the trademark owner. No part of this publication may be copied or reproduced without prior written consent.

## FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



## **SAFETY PRECAUTIONS**

To ensure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

## Contents

1. Introduction .....	1
1.1 Introduction to TL-TP70-HDARC .....	1
1.2 Features .....	1
1.3 Package List .....	1
2. Panel Description .....	2
2.1 Transmitter .....	2
2.2 Receiver .....	3
3. System Connection .....	4
3.1 Usage Precautions .....	4
3.2 System Diagram .....	4
3.3 Connection Procedures .....	4
3.4 PoE Solution .....	5
3.5 ARC Solution .....	6
3.6 Application .....	7
4. Specification .....	8
4.1 Supported Resolutions .....	9
5. Panel Drawing .....	10
6. Troubleshooting & Maintenance .....	12
7. After-sales Service .....	13

# 1. Introduction

## 1.1 Introduction to TL-TP70-HDARC

The TL-TP70-HDARC is an ultra thin design extender set consisting of a transmitter and a receiver. The set transmits a 1080p signal to the receiver up to 70m via a shielded Cat5e/Cat6 cable. Bi-directional IR communication is included to allow control of an IR source or display. PoE power allows you to connect the power supply at either the transmitter or the receiver to power both units. The set also supports ARC, which enables audio up streaming from display to an audio system using either HDMI or the coax digital output.

## 1.2 Features

- HDMI1.4 compliant, supports resolutions up to 4Kx2K
- Maximum transmission distance is 70m for 1080p and 40m for 4Kx2K over a single shielded CAT5e/CAT6 cable
- High Bandwidth: 10.2Gps.
- Compliant with HDCP1.4
- Supports bi-directional PoE
- Supports ARC on HDMI or coax digital output
- Bi-directional IR control

## 1.3 Package List


- ✧ 1 x TL-TP70-HDARC (including TX and RX)
- ✧ 4 x Mounting Brackets
- ✧ 4 x Screws
- ✧ 8 x Rubber Feet
- ✧ 1 x Power Adapter (DC V 1A)
- ✧ 1x IR Emitter (5V)
- ✧ 1 x IR Receiver (5V, with carrier)
- ✧ 1 x User Manual



Please confirm if the product and the accessories are all included, if not, please contact the dealer.

## 2. Panel Description


### 2.1 Transmitter

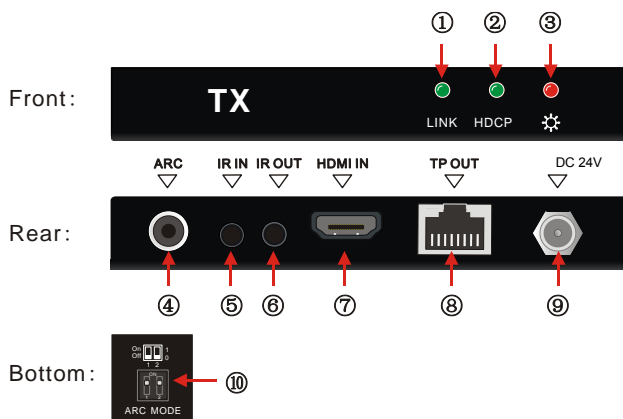

**Figure 2- 1 Panel Description of TX**

No	Name	Description
①	LINK	Twisted pair Link status indicator, lights when the transmitter & receiver are linked and communicating
②	HDCP	HDCP compliant indicator <ul style="list-style-type: none"> <li>➤ Lights when input signal is HDCP encrypted</li> <li>➤ Blinks when the input signal is not HDCP encrypted</li> <li>➤ Turns off when there is no input</li> </ul>
③	Power	Illuminates red when the unit is powered on
④	ARC	Output port for ARC audio
⑤	IR IN	Connect the included 5V IR Receiver (with carrier) to receive infrared signal, it will output at the RX IR OUT
⑥	IR OUT	Connect the included 5V IR Emitter and attach to the IR window of the device you wish to control.
⑦	HDMI IN	Connect HDMI source
⑧	TP OUT	Connect to the TP IN socket on the Receiver via shielded CAT5e/ CAT6 cable, supports bi-directional PoE
⑨	DC 24V	Insert the DC 24V power adapter here (optionally connect to the RX – only one unit needs power connected).
⑩	ARC Switcher	Dip switch for ARC mode (see page 5).

## 2.2 Receiver

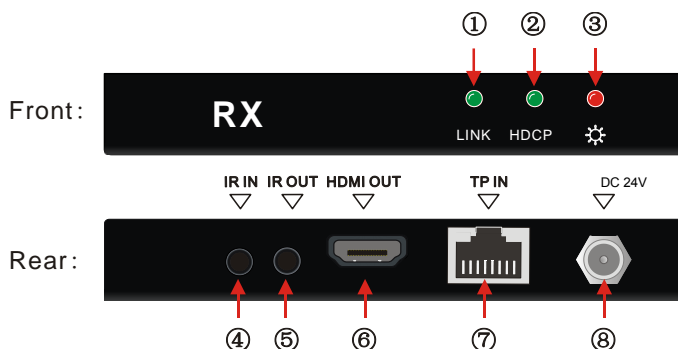

**Figure 2- 2 Panel Description of RX**


No.	Name	Description
①	LINK	Twisted pair Link status indicator, lights when the transmitter & receiver are linked and communicating
②	HDCP	HDCP compliant indicator <ul style="list-style-type: none"> <li>➤ Lights when input signal is HDCP encrypted</li> <li>➤ Blinks when the input signal is not HDCP encrypted</li> <li>➤ Turns off when there is no input</li> </ul>
③	Power	Illuminates red when the unit is powered on
④	IR IN	Connect the included 5V IR Receiver (with carrier) to receive infrared signal, it will output at the RX IR OUT
⑤	IR OUT	Connect the included 5V IR Emitter and attach to the IR window of the device you wish to control.
⑥	HDMI OUT	Connect to an HDMI display
⑦	TP IN	Connect to the TP OUT socket on the Transmitter via shielded CAT5e/ CAT6 cable, supports bi-directional PoE.
⑧	DC 24V	Insert the DC 24V power adapter here (optionally connect to the TX – only one unit needs power connected).

## 3. System Connection

### 3.1 Usage Precautions

- 1) System should be installed in a clean environment and has a proper temperature and humidity.
- 2) All of the power switches, plugs, sockets and power cords should be insulated for safety.
- 3) All devices should be connected before powering the extenders.
- 4) Use shielded straight-thru Cat5e/Cat6 cable with TIA/EIA T568B terminations.

### 3.2 System Diagram

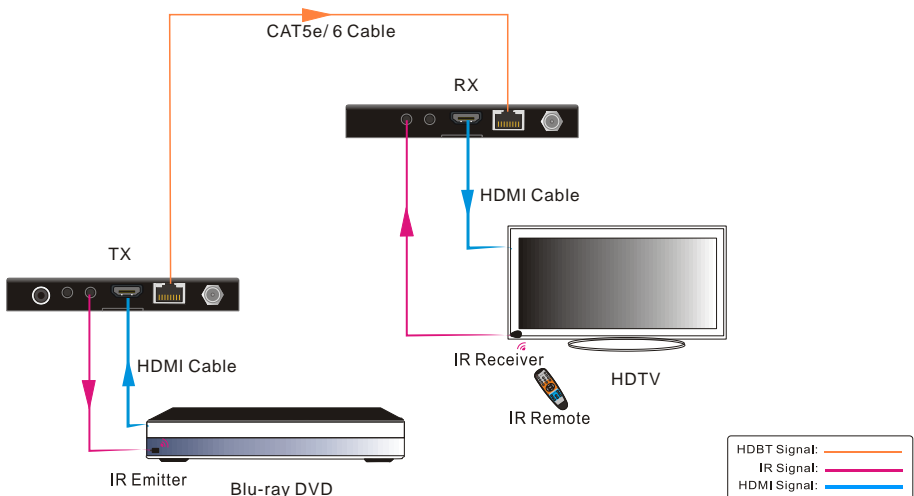

**Figure 3- 1 System Connection**

### 3.3 Connection Procedures

- Step1.** Connect an HDMI source (such as a Blu-ray player) to the **HDMI IN** port of the transmitter with an HDMI cable.
- Step2.** Connect the **TP OUT** port of the transmitter to **TP IN** port of the receiver via a shielded CAT5e/CAT6 cable.
- Step3.** Connect an HDMI display (such as an HDTV) to the **HDMI OUT** port of the receiver with an HDMI cable.




**Step4.** When using the bi-directional IR control, do the following.

- a) Connect the included IR receiver to the **IR IN** port at either the transmitter or the receiver.
- b) Connect the included IR Emitter to the **IR OUT** port at the other end.

**Step5.** Connect the included DC 24V power adaptor to the power port of the transmitter; the receiver will be energized synchronously.


### 3.4 PoE Solution

The TL-TP70-HDARC boasts twisted pair ports which support PoE. Connect the DC adapter to either the transmitter or the receiver, the other end will be energized simultaneously. (see in the following figure):

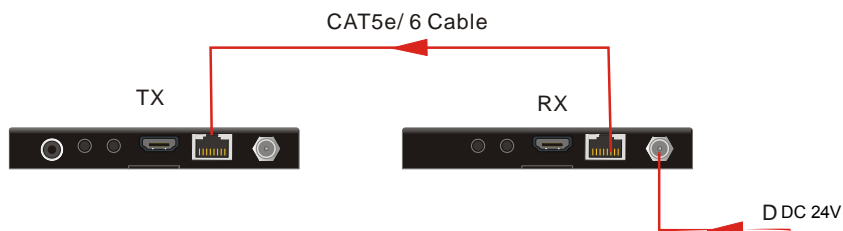


**Figure 3- 2 PoE Connection**



ARC Mode	Description	Connection
 <b>00</b>	ARC will be passed through the HDMI input of the TX to an AVR that supports ARC.	Connect an ARC device (e.g. Amplifier) to the TX and an ARC display (Smart TV) to the RX.

When the ARC switcher switched as "00", connect the devices according to the following figure:

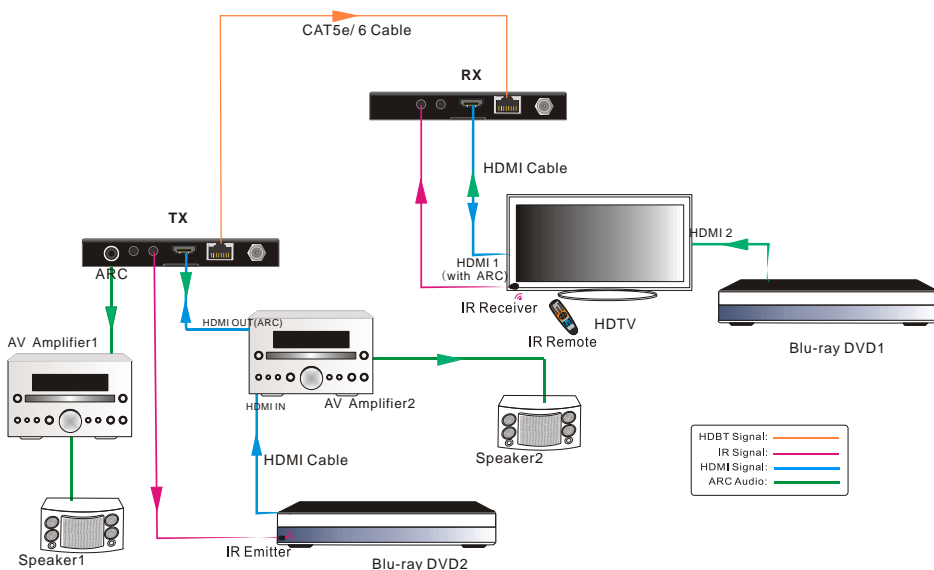

**Figure 3- 4 System Connection (ARC "00")**



- 1) All utilized devices including the HDMI cable should support ARC.

### 3.6 Application

The TL-TP70-HDARC has many applications that it can be used in for extending HDMI signals, such as meeting rooms, sports bars, and corporate board rooms. Because of the ARC function, the set is especially useful for residential applications.

## 4. Specification

<b>Model</b>	Transmitter	Receiver
<b>Spec</b>		
<b>Input</b>		
Signal	1 HDMI, 1 IR	1 IR, 1 TP
Connector	1 19-pin Type-A female HDMI 1 3.5mm mini jack	1 3.5mm mini jack 1 RJ-45
<b>Output</b>		
Output	1 ARC, 1 IR, 1 TP	1 HDMI, 1 IR
Connector	1 SPDIF 1 3.5mm mini jack 1 RJ-45	1 19-pin Type-A female HDMI 1 3.5mm mini jack
<b>General</b>		
Resolution Range	800x600@60Hz~4K×2K@30Hz	
Transmission Distance	1080p 70m (TX and RX powered separately) 1080p 65m (PoE Solution) 4k ≤ 40m	
Bandwidth	10.2Gbps	
HDMI Standard	HDMI1.4 and HDCP1.4	
Temperature	0~ 50℃	
Reference Humidity	10% ~ 90%	
Power Supply	DC 24V, 1A	
Power Consumption	3.3W	6.4W
Dimension (W*H*D)	115 x 16.2 x 114 mm	115 x 16.2 x 114 mm
Weight	140g	140g


All nominal levels are at ±10%.

## 4.1 Supported Resolutions


Aspect Ratio	Resolution	Refresh Rate
4Kx 2K	4096x2160	24/25/30Hz
	3840x2160	24/25/30Hz
16:9	1920x1080	60Hz
	1600x900	60Hz
	1366x768	60Hz
	1280x720	60Hz
	1024x576	60Hz
16:10	1920x1200	60Hz
	1680x1050	60Hz
	1440x900	60Hz
	1360x768	60Hz
	1280x800	60Hz
4:3	1600x1200	60/65/70/75/85Hz
	1400x1050	60Hz
	1280x1024	60/75/85/96Hz
	1024x768	60/70/75/85Hz
	800x600	56/60/72/75/85Hz
	640x480	60/72/75Hz

**Note:** The TL-TP70-HDARC supports 4k HDMI signal, choose quality HDMI cables compliant with HDMI1.4 for reliable transmission.

## 5. Panel Drawing

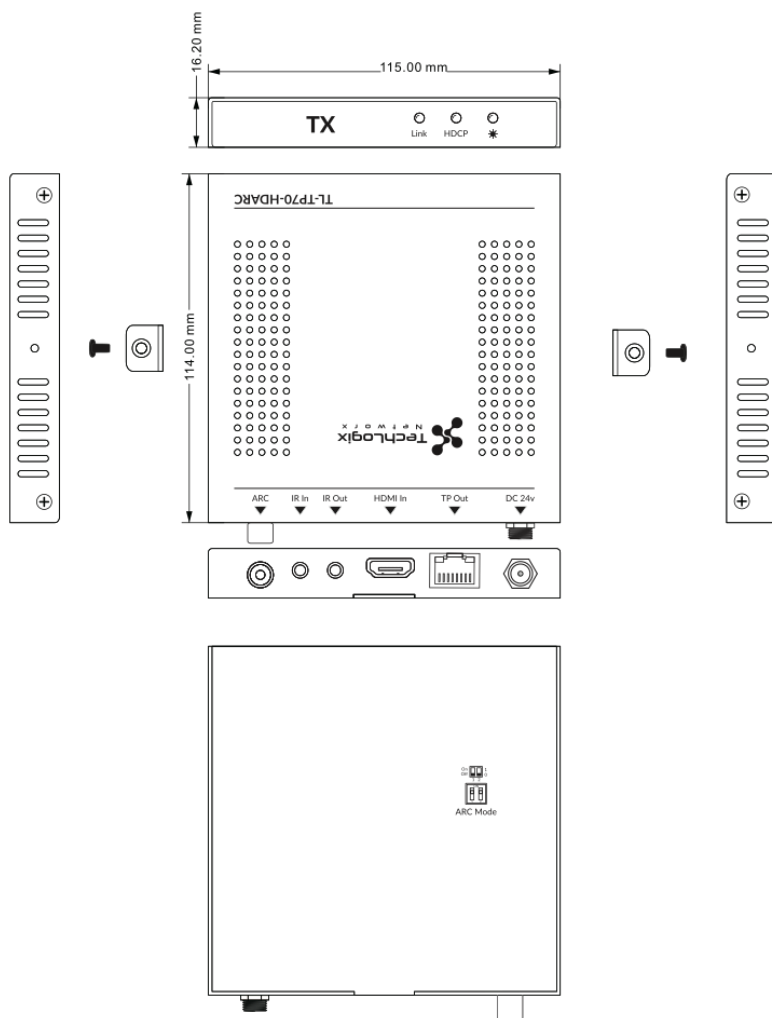

Transmitter

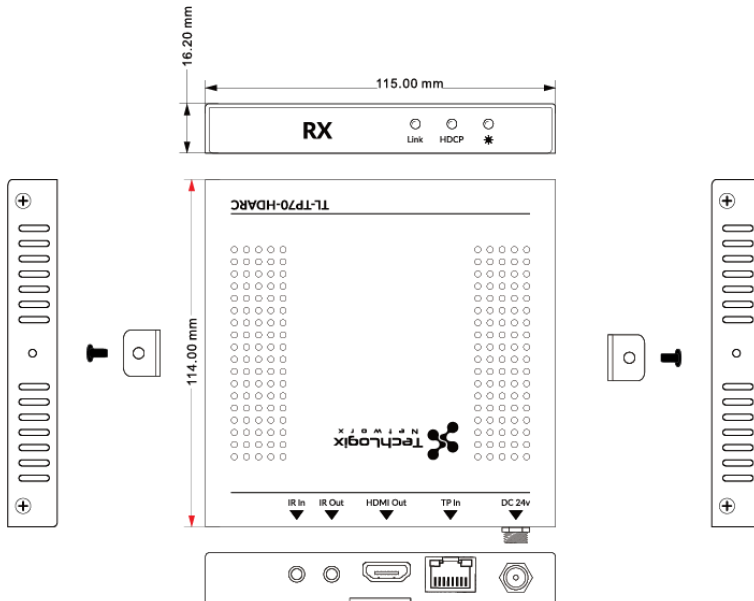

Receiver

## 6. Troubleshooting & Maintenance

### ● **No image on display:**

- Ensure that the display device has been set to the correct input.
- Ensure that the HDMI cables used for both the source/transmitter and the receiver/display are properly connected and are working. Test the HDMI cables directly from a source to display and ensure their operation.
- Ensure that the Cat5e/Cat6 cable has not been damaged and that it has been terminated correctly with T568B on both ends. A temporary length of Cat5e/Cat6 can be used for testing to ensure that the devices are all compatible and working properly.
- Ensure proper grounding of the power supply.
- Known issues with HDMI 1.2 source devices:

Older compatibility (HDMI 1.2) may result in transmission issues. Please contact Technical Support of your local distributor for a solution to these issues.

### ● **No output at the ARC port**

- In Bypass CEC mode:
  - Loose or failed HDMI or ARC connection;
  - Ensure HDMI IN port of TX is connected to an ARC device;
  - There is connection at the ARC port of TX and the device is working normally.
- In Force ARC mode:
  - Loose or failed HDMI or ARC connection;
  - There is connection at the ARC port of TX and the device is working normally.

### ● **Color loss or poor picture quality:**

- Ensure that the HDMI cables used for both the source and transmitter and the receiver and display are properly connected and are of good quality. Test the HDMI cables directly from a source to display and ensure their picture quality.
- Ensure proper grounding of the power supply.
- If the static becomes stronger or picture quality becomes worse when connecting the video connectors, this may be due to improper grounding.
- Check the grounding and make sure all the components are properly



grounded to a common ground. Improper grounding may cause damage to the receiver.

If your problem persists after following the above troubleshooting steps, seek further help from authorized dealer or our technical support.

## 7. After-sales Service

If some problems occur when using the device, please check the troubleshooting section referenced in this user manual.

- 1) **Product Limited Warranty:** We warrant that our products will be free from defects in materials and workmanship for **three years**. Please see warranty page posted on [www.tlnetworkx.com](http://www.tlnetworkx.com) for more info.
- 2) **What the warranty does not cover:**
  - Warranty expiration.
  - Factory applied serial number has been altered or removed from the product.
  - Damage, deterioration or malfunction caused by:
    - Normal wear and tear
    - Use of supplies or parts not meeting our specifications
    - No certificate or invoice as the proof of warranty.
    - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
    - Damage caused by force majeure.
    - Non-authorized service
    - Other causes which does not relate to a product defect
  - Delivery, installation or labor charges for installation or setup of the product
- 3) **Technical Support:** Email or call our after-sales department, please prepare the following information about your cases.
  - Product version and name.
  - Detailed failure situations.
  - Date and place of purchase.

**Remarks:** For any questions or problems, please try to get help from your local distributor.